

CONSOLE BOX

There is a console box (1) below the left side of the handlebar.

The maximum allowable load in the retractable box and console box shall be no more than

1.5 kg (3.3 lbs).

Do not open the console box while riding the scooter.

To open:

Make sure the Honda smart card key is ON (page 57) and enter the operating range with card key.

Push the console box release button (2).

The console box will come out.

Pull out the console box while pushing the knob (3).

To close:

Press forward until it is firmly closed.


Do not put the card key, mechanical key and ID tag in the console box.

The card key, mechanical key or ID tag may be locked inside and the card key system may not be activated.

Make sure the console box cover is closed before riding.

When washing your scooter be careful not to flood this area with water.

Do not store valuables or fragile articles in the console box.

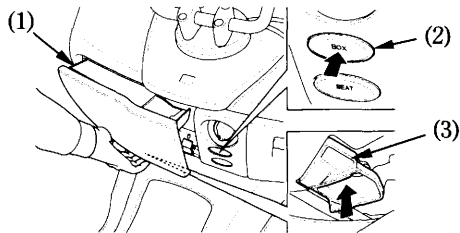

- (1) Console box
- (2) Console box release button
- (3) Knob