

6-speed Manual Mode

In this mode you can manually shift between 1st and 6th speed by operating the shift switch.

When going up hill, switch to a lower gear to enable more powerful riding depending on inclination of the rise.

Upshifting sequence:

To upshift transmission, press the shift switch (+) (1) once.


Shifting is not automatic in the 6-speed manual mode. Shift up not to let the engine rev enter the red zone.

Downshifting sequence:

To downshift transmission, press the shift switch (-) (2) once.

When passing, shift down to get powerful acceleration.

If your speed becomes too slow in the 6-speed manual mode, it shifts down automatically.

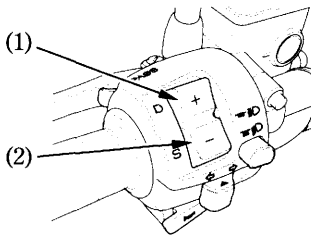

(1) Shift switch (+)

(2) Shift switch (-)