


## AIR CLEANER

Refer to the Safety Precautions on page 131.

The air cleaner should be serviced at regular intervals (page 133). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the left body cover (page 104 ).
2. Remove the air cleaner cover (1) by removing the screws A (2).

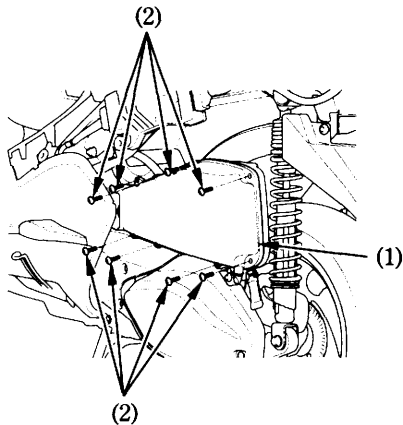

- (1) Air cleaner cover  
(2) Screws A