


6. Remove the left front side cover (9) by removing the bolts C (10).
7. Remove the left side outer cover (11) by removing the bolt D (12).
8. Remove the air cleaner element cover (13) by removing the bolts E (14).
9. Remove the air cleaner element (15).
10. Wash the air cleaner element in clean, nonflammable or high flash point solvent and let it dry thoroughly.

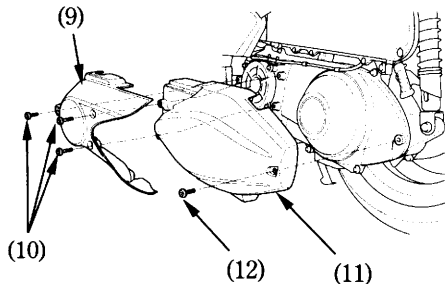


- (9) Left front side cover
- (10) Bolts C
- (11) Left side outer cover
- (12) Bolt D

Never use petrol or low flash point solvents for cleaning the air cleaner. A fire or explosion could result.

Allow the air cleaner element to dry thoroughly before installation.

Do not apply oil to the air cleaner element; damage to the drive belt will occur.

11. For installation, reverse the removal procedure.

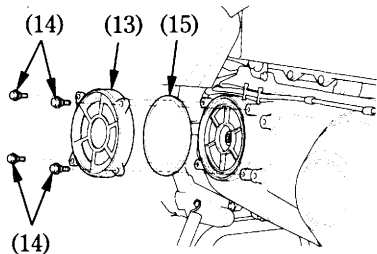

- (13) Air cleaner element cover
- (14) Bolts E
- (15) Air cleaner element