


## Clip removal and installation:

### **Removal**

- ① Press down on the centre pin to release the lock.
- ② Pull out the clip from the hole.

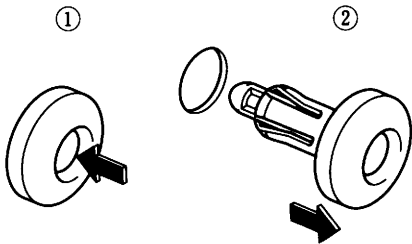

### **Installation**

- ① Slightly open the retaining pawls and then push them out.
- ② Insert the clip into the hole.
- ③ Lightly press down on the centre pin to lock the clip.

