

Main Fuse:

The main fuse A (1) and B (2), located near the battery below the seat.

The specified fuses are:

Main fuse A: 40 A

Main fuse B: 30 A

1. Open the front seat (page 93) and remove the mat (page 135).
2. Remove the battery cover (page 162).


Main Fuse A:

- Open the fuse box cover (3).
- Pull out the old fuse and install a spare main fuse A (4).

Main Fuse B:

- Disconnect the wire connector (5) of the starter magnetic switch.
- Pull out the old fuse and install a spare main fuse B (6).

Install the remaining parts in the reverse order of removal.

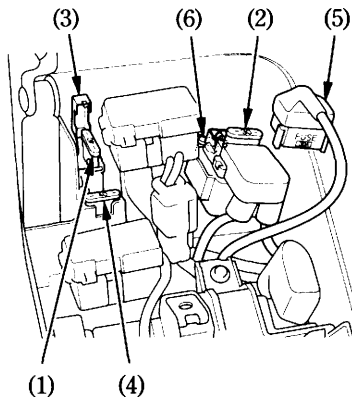

- | | |
|--------------------|-----------------------|
| (1) Main fuse A | (4) Spare main fuse A |
| (2) Main fuse B | (5) Connector |
| (3) Fuse box cover | (6) Spare main fuse B |