


Headlight Bulb

Left headlight:

- Remove the console box (page 102).
- Remove the maintenance lid (1) by removing the screw (2).

Right headlight:

- Remove the retractable box (page 100).

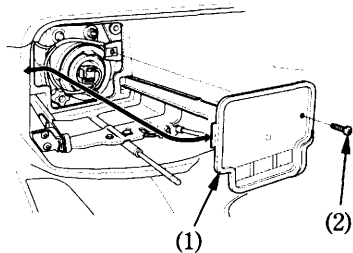

- (1) Maintenance Lid
- (2) Screw