


## Position Light Bulb

### Left position light:

- Remove the console box (page 102).
- Remove the maintenance lid (1) by removing the screw (2).

### Right position light:


- Remove the retractable box (page 100).

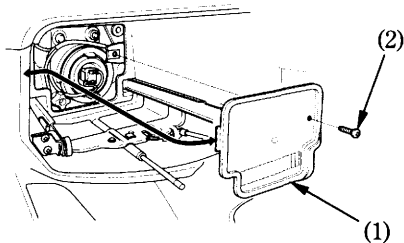

(1) Maintenance Lid

(2) Screw

1. Turn the socket (3) counterclockwise, then pull it out.
2. Pull out the bulb (4) without turning.
3. Install a new bulb in the reverse order of removal.

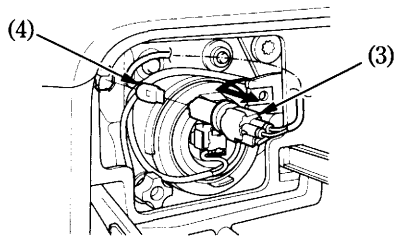

(3) Socket

(4) Bulb