


Stop/Tail Light Bulb

1. Remove the rear body lower cover (page 105).
2. Turn the socket (1) approximately 45° counterclockwise, then pull it out toward you.
3. Pull out the bulb (2) without turning.
4. Install a new bulb in the reverse order of removal.

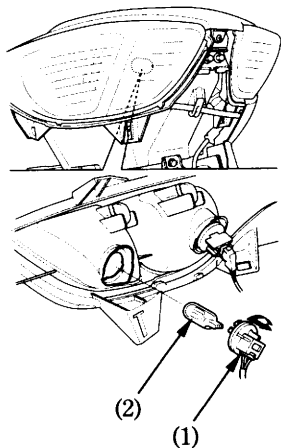

- (1) Socket
(2) Bulb