

(Ref. No.) Description	Function
(6) Tachometer red zone	Never allow the tachometer needle to enter the red zone, even after the engine has been broken it. CAUTION: *Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.
(7) Coolant temperature gauge	Shows coolant temperature (see page 14).
(8) Standby indicator (NSS250A)	Flashes by the idle stop system when the idle stop is functioned.
(9) Digital clock	Shows hour and minute (see page 16)
(10) Right turn signal indicator	Lights when the light turn signal operates.
(11) Parking brake indicator	It lights as a reminder that you have not released the parking brake.