

2. To stop the scooter.
 - Throttle is closed. The idle stop system will not function when open the throttle.
 - Bring the scooter to a complete stop. The idle stop system will not function unless the scooter is brought to a complete stop.
3. To restart the engine.
 - Check that the standby indicator is flashing. The engine cannot be restarted even if the throttle is opened unless the standby indicator is flashing.
 - The idle stop system will be released, and standby indicator turned off unless the rider sits in the seat for more than three minutes.
 - Squeeze the brake lever and press the starter button when restarting the engine with the standby with indicator not flashing.

For Safety Riding (NSS250A)

Observe the followings to ensure safety in the operation of the idle stop system.

- Do not leave the scooter unattended with the idle stop system in operation. Be sure to remove the key from the ignition switch when the scooter is to be left unattended.

