


**▲ WARNING**

- \* **Do not remove the radiator cap when the engine is hot. The coolant is under pressure and could scald you.**
- \* **Keep hands and clothing away from the cooling fan, as it starts automatically.**

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your authorized Honda dealer for repair.

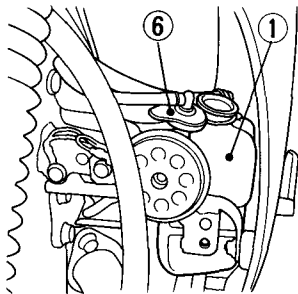

(1) Reserve tank

(6) Cap