


WHEEL REMOVAL

(Refer to the maintenance precautions on page 51, 52).

Front Wheel Removal

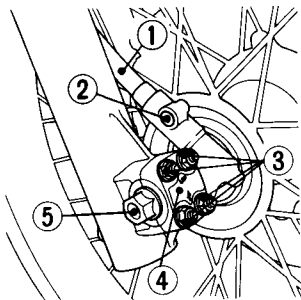

- (1) Speedometer cable (4) Axle holder
(2) Screw (5) Axle
(3) Axle holder nuts

NOTE:

* This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your authorized Honda dealer for this service.

1. Raise the front wheel off the ground by placing a support under the engine.
2. Remove the speedometer cable set screw (2) and disconnect the speedometer cable (1).
3. Remove the front axle nuts (3) and the front axle holder (4).
4. Unscrew the axle (5). Remove the wheel.

NOTE:

* Do not squeeze the brake lever when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer.