



## Rear Wheel Removal

1. Raise the rear wheel off the ground by placing a support under the motorcycle.
2. Remove the rear brake adjusting nut (1). Disconnect the brake rod (2) from the brake arm (3).
3. Loosen the drive chain adjusting nut lock nuts (4) and adjusting nuts (5).

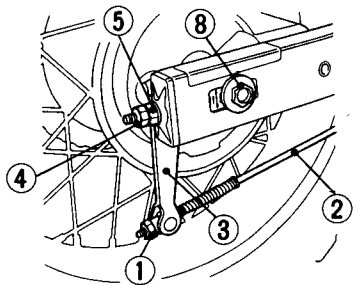

- (1) Adjusting nut      (3) Brake arm  
(2) Brake rod

4. Remove the rear axle nut (6).
5. Remove the drive chain (7) from the driven sprocket by pushing the rear wheel forward.
6. Remove the axle shaft (8) and rear wheel from the swingarm.

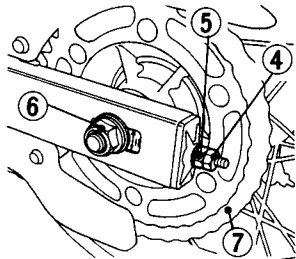

- (4) Lock nuts      (7) Drive chain  
(5) Adjusting nuts      (8) Axle shaft  
(6) Axle nut