

TYRES

Proper air pressure will provide maximum stability, riding comfort and tyre life.

Check tyre pressure frequently and adjust if necessary.

NOTE:

* Tyre pressure should be checked before you ride while the tyres are “cold”.

On/off-road tyres are standard on this model. Select the right replacement tyres in accordance with the following specifications.

Check the tyres for cuts, embedded nails, or other sharp objects. See your authorized Honda dealer for replacement of damaged tyres or punctured inner tubes.

		Front	Rear
Tyre size		90/90—21 54S	120/90—17 64S
Cold tyre pressures kPa (kg/cm ² , psi)	Rider only	150 (1.5 , 22)	150 (1.5 , 22)
	Rider and passenger	150 (1.5 , 22)	200 (2.0 , 29)
Tyre brand	BRIDGESTONE DUNLOP	TW41 K560	TW42 K560