


To replace fuses in the fuse box, remove the panel (6) by removing the screws (7) and open the fuse box cover (8). Spare fuses (9) are located in the fuse box. Pull the old fuse out of the clips.

Push a new fuse into the clips and install the fuse box cover. Install the panel and tighten the screws.


**▲ WARNING**

**\* Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.**

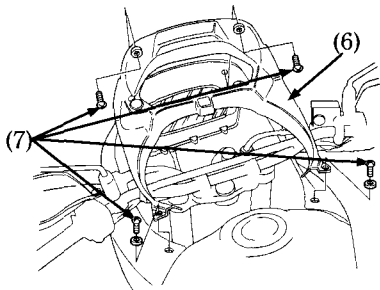

(6) Panel

(7) Screws

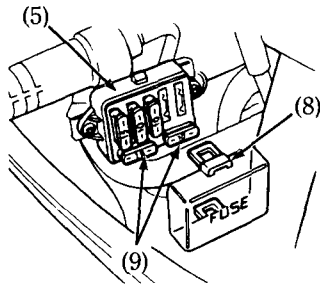

(5) Fuse box

(8) Fuse box cover

(9) Spare fuses