


OPERATING INSTRUCTIONS

Ignition Switch


The ignition switch ① is located on the right side of the handlebar. Turn the switch to "RUN" when starting the engine and to "OFF" when stopping.

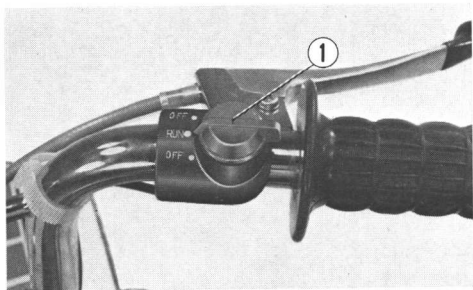

① Engine stop switch

Front Brake Lever

The front brake lever ① is located on the right handlebar. Application of the front brake is effected by squeezing the front brake lever with a force proportional to the braking effort required.

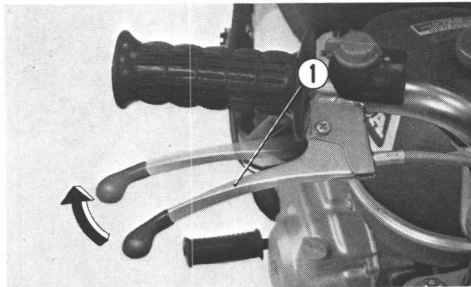

① Front brake lever