



The fuel cock has two positions; "ON" and "OFF":

ON . . . Turn the fuel cock to this position before riding.

OFF . . . No fuel flows from the fuel tank to the carburetor.

Turn the fuel cock to this position after riding.

