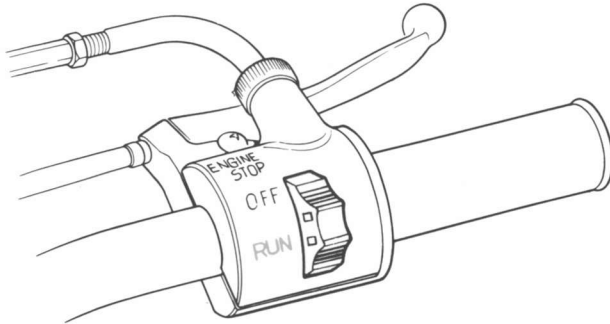

- ENGINE STOP SWITCH

RUN:

To start the engine, apply the rear brake lock lever, move the engine stop switch knob to this position, and then crank the engine.



OFF:

To stop the engine, move the engine stop switch knob to this position. The engine cannot be started if the switch is in this position.

