

3. OPERATION



Practice the following steps until you know them in proper order and can do them smoothly.

• STARTING THE ENGINE


CAUTION:

- * *Inspect your motorcycle before you start the engine to see that the fuel and oil tanks are filled to the proper levels.*
- * *Place the motorcycle on the center stand whenever you start the engine.*


- (1) Turn the fuel cock to ON.
- (2) Turn the engine stop switch to RUN.

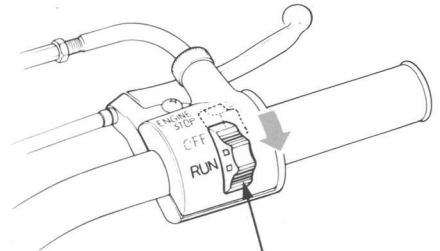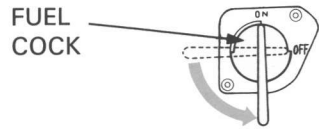

REAR BRAKE LEVER

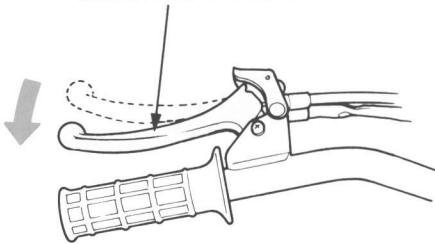

BRAKE LOCK LEVER

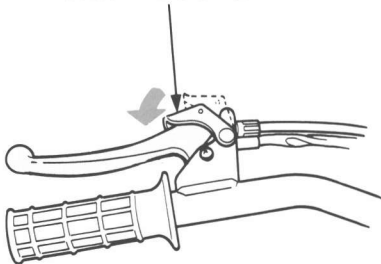

ENGINE STOP SWITCH

- (3) Pull in the rear brake lever fully and apply the brake lock (See Page 16).

NOTE:

The rear brake may not be locked securely if the rear brake is not adjusted properly.