
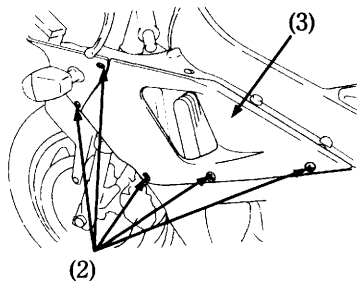


MIDDLE FAIRING

Removal:

1. Pull and remove the three trim clips (1).
2. Turn the five clips (2) 90° counter-clockwise.
3. Remove the middle fairing (3).

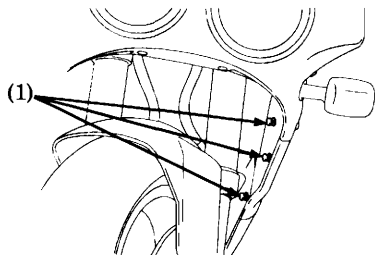

(1) Trim clips
(2) Clips

(3) Middle fairing