
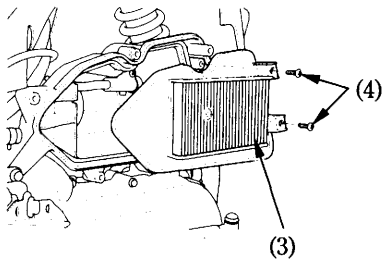


## AIR CLEANER

Refer to the Safety Precautions on page 61 .

The air cleaner should be serviced at regular intervals (page 63 ). Service more frequently when riding in unusually wet or dusty areas.

1. Lift up the body cover (page 38 ).
2. Remove the air cleaner cover (1) by removing the screws A (2).
3. Remove the air cleaner (3) by removing the screws B (4).

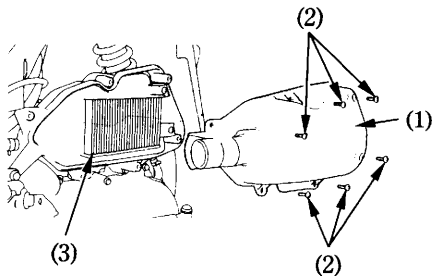

- |                       |                 |
|-----------------------|-----------------|
| (1) Air cleaner cover | (3) Air cleaner |
| (2) Screws A          | (4) Screws B    |