

Make sure the cut-out on the adjusting nut is seated on the brake arm pin (4) after making final free play adjustment.

3. Apply each brake several times and check for free wheel rotation when released.

NOTE:

- * If proper adjustment cannot be obtained by this method, see your authorized Honda dealer.