


AIR CLEANER

(Refer to the maintenance precautions on page 51).

The air cleaner should be serviced at regular intervals (page 48). Service more frequently when riding in dusty areas.


1. Remove the three screws (1).
2. Loosen and remove the two screws (2) with clips (3).

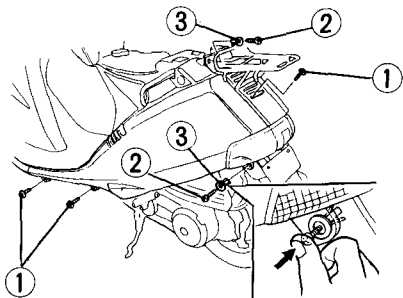

(1) Screws
(2) Screws

(3) Clips

3. Detach the hooks (4) on the rear part of the left side cover (5) first, and then detach the hooks (6) on the front part.

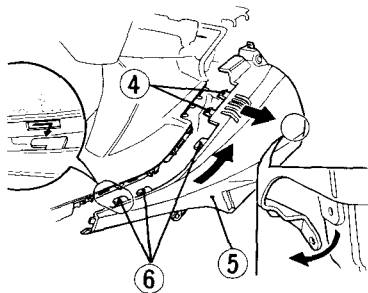

(4) Hooks

(5) Left side cover

(6) Hooks