

SPARK PLUG

(Refer to the maintenance precautions on page 51.)

Recommended plugs:

Standard:

BP6HSA (NGK) or
W20FP-L (ND)


For cold climate (Below 5°C, 41°F):

BP4HSA (NGK) or
W14FP-L (ND)

For extended high speed riding:

BP8HSA (NGK) or
W24FP-L (ND)

1. Remove the side cover (page 52).
2. Disconnect the spark plug cap.
3. Clean any dirt from around the spark plug base. Remove and discard the spark plug.
4. Make sure the spark plug gap (1) is 0.6–0.7 mm (0.024–0.028 in) using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (2) carefully.

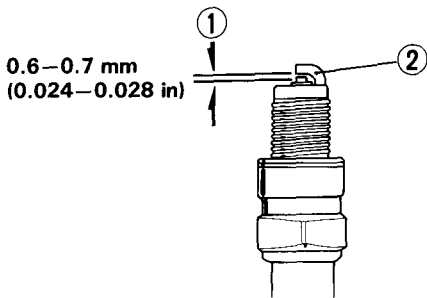

(1) Spark plug gap

(2) Side electrode