



when the clutch lever free movement, measured at the end of the lever, is **0.4~0.8 in. (10~20 mm)**. If adjustment is necessary, loosen the lock nut ⑤ on the clutch cable lower adjuster ⑥ and make the adjustment with the adjuster. Turning the adjuster clockwise will increase the free movement of the clutch lever.

3. The adjustment can also be made in the same manner at the clutch cable upper adjuster ⑦.
4. After adjustment, test ride the motorcycle to be certain the clutch operates properly, without slip or drag.

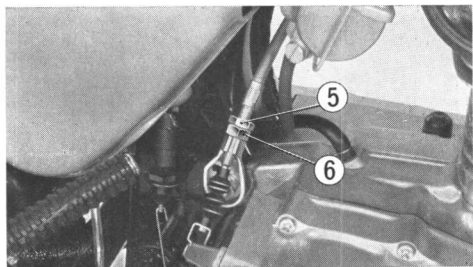

⑤ Lock nut
⑥ Clutch cable lower adjuster

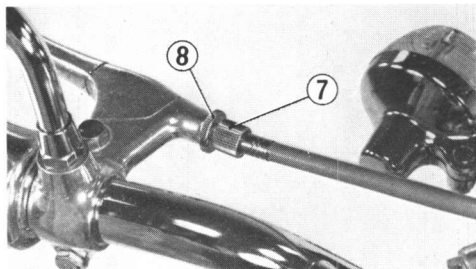

⑦ Clutch cable upper adjuster
⑧ Lock nut