


Rear Brake Adjustment


Free play measured at the tip of the rear brake pedal ① should be maintained at 0.8~1.2 in. (20~30 mm).

The adjuster is located on the brake arm

at the rear wheel hub. Turn the adjusting nut ② clockwise to decrease free play or counterclockwise to increase free play.

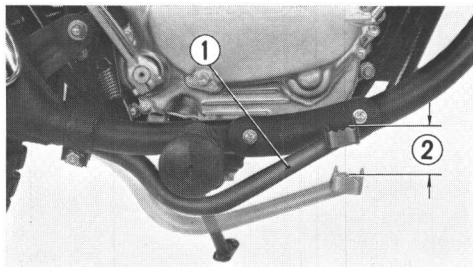

- ① Rear brake pedal
- ② Free play

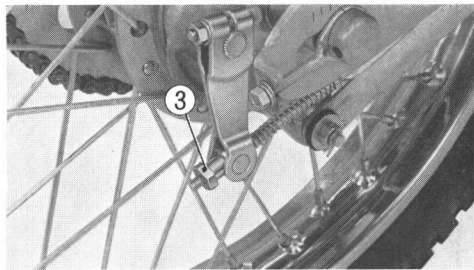

- ③ Rear brake adjusting nut