

TYRES

This motorcycle is equipped with a tyre with tube on the front wheel, and a tubeless tyre on the rear wheel. For rear wheel, use only tyres marked "TUBELESS" and tubeless valves on rims marked "TUBELESS TYRE APPLICABLE".

Proper air pressure will provide maximum stability, riding comfort and tyre life. Check tyre pressure frequently and adjust if necessary.

NOTE:

* Tyre pressure should be checked before you ride while the tyres are "cold".

* For rear tyre:

Tubeless tyres have some degree of selfsealing ability if they are punctured, and leakage is often very slow. Inspect very closely for punctures, especially if the tyre is not fully inflated.

On/off-road tyres are standard on this model. Select the right replacement tyres in accordance with the following specifications.

For front wheel

Check the tyres for cuts, embedded nails, or other sharp objects. See your Honda dealer for replacement of damaged tyres or punctured inner tubes.

For rear wheel

Check the tyres for cuts, embedded nails, or other sharp objects. Check the rims for dents or deformation. If there is any damage, see your Honda dealer for repair, replacement.

		Front	Rear
Tyre size		2.75-21 45P	120/80- 18 62P
Cold tyre pressures kPa (kgf/cm ² , psi)	Rider only	125 (1.25, 18)	150 (1.50, 22)
	Rider and passenger	125 (1.25, 18)	150 (1.50, 22)
Tyre brand BRIDGESTONE		TW27G (with tube)	TW30G (tubeless)