


SIDE COVER

To remove the left side cover (1), remove the two screws (2) and release the left side cover from the tab (3).

To install the left side cover, insert the tab (4) of the side cover and tighten two screws.

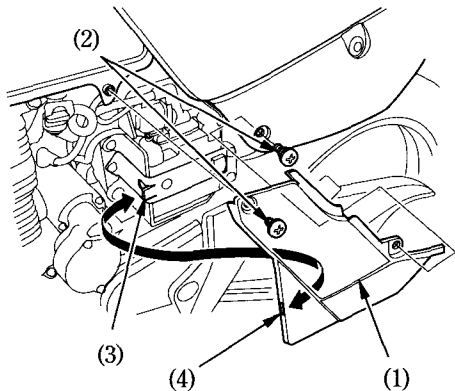

(1) Left side cover
(2) Screws

(3) Tab
(4) Slit