

AIR CLEANER

(Refer to the maintenance precautions on page 52).



The air cleaner should be serviced at regular intervals (page 46). Service more frequently when riding in unusually wet or dusty areas.

Air cleaner replacement:

1. Remove the seat. (page 30)
2. Release the hooks (1) and remove the air cleaner housing cover (2).
3. Lift the tab (3) and unhook the air cleaner (4).
4. Take out and discard the air cleaner.
5. Install the new air cleaner.

Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model. Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.

6. Install the parts in the reverse order of removal.

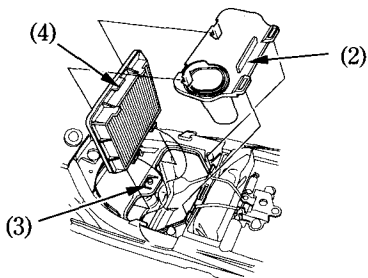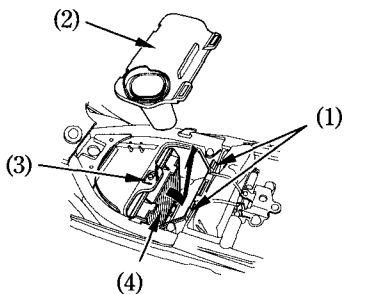

- (1) Hooks
(2) Air cleaner housing cover

- (3) Tab
(4) Air cleaner