
ENGINE OIL

Check engine oil level each day before operating the motorcycle.

To check the oil level:

1. Place the motorcycle on its center stand on firm, level ground.
2. Start the engine and let it idle for a few minutes.
3. Stop the engine. After a few minutes, check the oil level inspection window.

The oil level should be between the upper and lower level marks.

4. If required, remove the airduct/maintenance cover (page 66) and filler cap, add the specified oil up to the upper level mark. Do not overfill.
5. Reinstall the filler cap.

CAUTION:

- ***Running the engine with insufficient oil can cause serious engine damage.***

