

# ENGINE

---

## IDLE SPEED

Refer to Maintenance Precautions on page 69.

The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

### NOTE:

- Do not attempt to compensate for faults in other systems by adjusting idle speed. See your authorized Honda dealer for regularly scheduled carburetor adjustments.

1. Warm up the engine, shift to neutral and place the motorcycle on its center stand.
2. Open the fuel filler compartment.
3. Adjust idle speed with the adjusting knob.

Idle Speed:  **$1,000 \pm 100 \text{ min}^{-1}$  (rpm) (Except SW type)**

**$1,200 \pm 50 \text{ min}^{-1}$  (rpm) (SW type)**

(In neutral)

