

PARTS LOCATION

Voltmeter

This meter shows you the battery voltage when the ignition is ON.

The needle should stay within the white zone.

If the needle reaches the red zone, immediately turn off the lighting and other electrical circuits to reduce load on the battery.

CAUTION:

- ***Damage to the battery may result if the needle allowed to stay within the red zone.***

