
Hazard Switch

The hazard switch is located under the left fairing pocket. It activates all outside signals (U type; Except headlight) regardless of position of the ignition switch.

CAUTION:

- *The system should be used only when the motorcycle is stopped under emergency or hazardous condition.*
- *Be sure to turn the switch off when the hazard warning is no longer required. Activating the outside signals for longer than 30 minutes may discharge the battery, resulting in difficulty in starting the engine.*

