

ELECTRICAL

FUSE REPLACEMENT

The fuse box is located under the left side cover.

The specified fuses are:

10A and 20A

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

CAUTION:

- **Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace fuses in the fuse box: remove the left side cover. Pull the old fuse out of the clips. Push a new fuse into the clips and install the fuse box cover.

