
BULB REPLACEMENT

⚠ WARNING

- * The light bulb becomes very hot while the light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

CAUTION:

- * Wear clean gloves while replacing the bulb.
- * If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.

NOTE:

- * Be sure to turn the ignition switch OFF when replacing the bulb.

Tail/Brake light Bulb

Rear Turn signal light Bulb

1. Remove the seat (page 10).
2. Remove the saddlebags.
3. Remove the side covers.
4. Remove the two screws fastening the front of the seat cowl, then remove the four bolts while holding the stay by hand. Remove the seat cowl by pulling it up.

