

MAINTENANCE

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING (NOTE 1)								Refer to page
			×1,000 km	1	6	12	18	24	30	36	
			×1,000 mi	0.6	4	8	12	16	20	24	
		MONTHS		6	12	18	24	30	36		
FINAL DRIVE OIL									R	29, 83	
BRAKE FLUID		NOTE 3				R			R	18	
BRAKE PAD WEAR										93	
BRAKE SYSTEM										18, 94	
* BRAKE LIGHT SWITCH										—	
* HEADLIGHT AIM										—	
CLUTCH SYSTEM										21	
CLUTCH FLUID		NOTE 3				R			R	21	
SIDE STAND										95	
* SUSPENSION										—	
* NUTS, BOLTS, FASTENERS										—	
** WHEELS/TYRES										—	
** STEERING HEAD BEARINGS										—	

- * SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

Honda recommends that your authorized Honda dealer should road test your motorcycle after each periodic maintenance is carried out.

NOTES: 1. At higher odometer readings, repeat at the frequency interval established here.

2. Service more frequently when riding in unusually wet or dusty areas.

3. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.

4. Switzerland type only.