

-
6. Fill the crankcase with approximately 3.6 liters (3.8 US qt, 3.2 Imp qt) of the recommended oil (page 28).
 7. Install the oil filler cap.
 8. Start the engine and let it idle for a few minutes.
 9. Stop the engine. Make sure the oil level is at the upper level mark on the inspection window (page 27) and there are no oil leaks.

NOTE:

- When running in very dusty conditions, oil changes should be performed more frequently than specified in the maintenance schedule.