

FILTERS/LUBRICATION

AIR CLEANER

Refer to Maintenance Precautions on page 69.

The air cleaner should be serviced at regular intervals (page 65). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the parts in sequence, according to the order in the illustration.

NOTE:

- Be careful not to break any tabs.

2. Remove the air cleaner and discard it.

3. Install a new air cleaner. Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model. Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.

4. Install removed parts in the reverse order of removal.

NOTE:

- Make sure to engage all tabs and to secure all fasteners.