

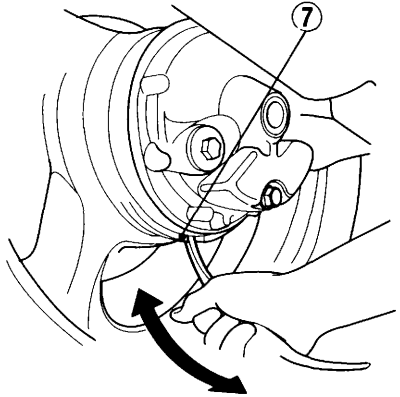
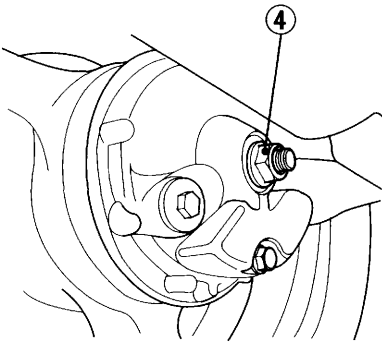


For related torque specifications, see page 92. The numbers indicate the sequence of disassembly.

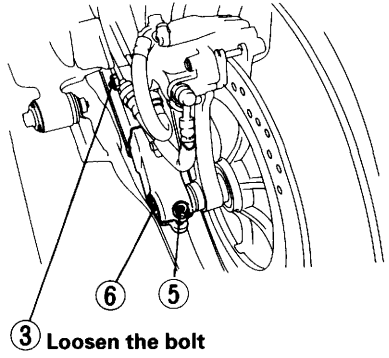

Sensor

(Model equipped with CBS/ABS/TCS)

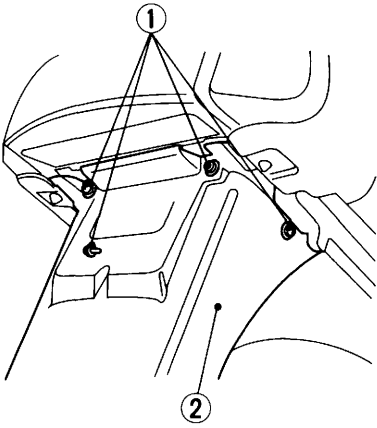