
SEAT

To Remove the Rear Seat:

Insert the ignition key and turn it clockwise to open the left latch lever. Pull the rear seat back and up while depressing a seat opener.

To Remove the Front Seat:

Remove the front seat. Pull the front seat back and up.

To Install the Front Seat:

Insert the prongs A into the recesses. Insert the prong B into the seat height adjuster. Push down on the rear of the front seat.

Be sure to align the holes in the rear of the front seat with the adjuster when install the front seat.

To Install the Rear Seat:

Install the front seat. Insert the prongs into the recesses under the frame cross member and then push down on the rear of the rear seat. Close the latch lever and turn the ignition key counterclockwise.

Be sure the seat is locked securely in position after installation.

