

MAINTENANCE

Side Cover

The right side cover must be removed for battery and fuse maintenance.
The left side cover must be removed for fuse maintenance.


The right and left side cover can be removed in the same manner.

Removal:

1. Remove the saddlebag (page 59).
2. Remove the front and rear seat (page 55).
3. Remove the side cover by removing the bolts.

Installation:

1. Install the side cover. Install and tighten the bolts.
2. Install the front and rear seat (page 55).
3. Install the saddlebag (page 59).

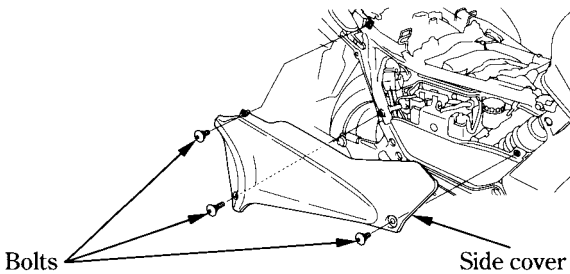

Maintenance Lid

The maintenance lid must be removed to remove the overhead cover.
The left maintenance lid must be removed to inspect the coolant reserve tank.

The right and left maintenance lid can be removed in the same manner.

Remove the maintenance lid by removing the clip (page 66).

