


---

The battery is located in the battery box behind the right side cover.

Removal:

1. Make sure the ignition switch is OFF.
2. Remove the right side cover (page 88 ).
3. Remove the right side under cover.
4. Disconnect the negative ( - ) terminal lead from the battery first.
5. Remove the battery holder by removing the bolt.
6. Disconnect the positive ( + ) terminal lead.
7. Pull the battery out of the battery box.

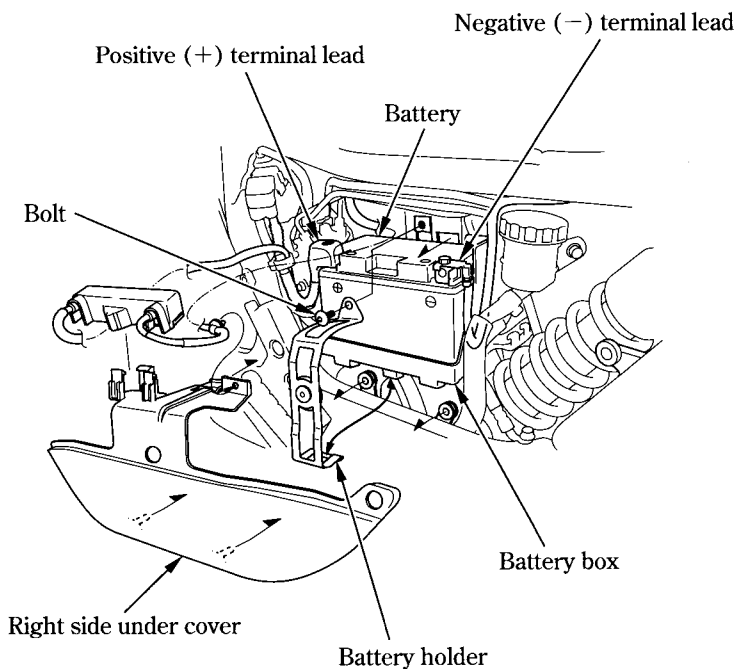

Installation:

1. Reinstall in the reverse order of removal. Be sure to connect the positive ( + ) terminal first, then the negative ( - ) terminal.
2. Check all bolts and other fasteners are secure.