

MAINTENANCE

Inner Cowl

The inner cowl must be removed for position light bulb replacement.

Removal:

1. Remove the clips A (page 62).
2. Remove the inner cowl by removing the screw and clips B.
 - Left inner cowl removal: Remove the sensor connector additionally.

Installation:

- Installation can be done in the reverse order of removal.

