


HEADLIGHT AIM VERTICAL ADJUSTMENT

Vertical adjustment can be made by moving the headlight case (1) as necessary.

To move the headlight case (1), loosen the bolts (2) and nuts (3).

Tighten the bolts (2) and nuts (3) after adjustment.

Obey local laws and regulations.

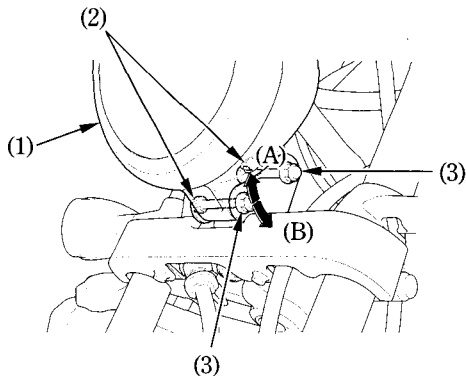

(1) Headlight case

(2) Bolts

(3) Nuts

(A) Up

(B) Down