


Engine Oil/Oil Strainer Screen

Engine oil quality is the chief factor affecting engine service life. Change the engine oil as specified in the maintenance schedule (page 45).

NOTE:

- Change the engine oil with the engine at normal operating temperature and the motorcycle on its side stand to assure complete and rapid draining.

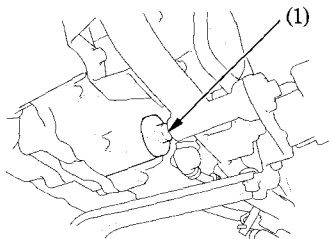


(1) Drain plug

1. Remove the oil filler cap from the right crankcase cover.
2. Place an oil drain pan under the crankcase and remove the oil drain plug (1).

NOTE:

- The spring (2) and oil strainer screen (3) will come out when the drain plug is removed.
3. Clean the oil strainer screen.
 4. Check that the oil strainer screen, sealing rubber (4) and drain plug O-ring are in good condition.

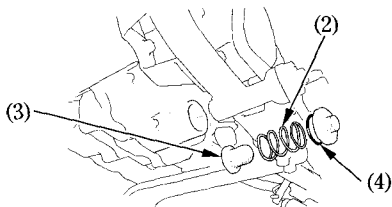

(2) Spring

(3) Oil strainer screen

(4) Sealing rubber