

SPARK PLUG


(Refer to the maintenance precautions on page 50).

Recommended plug:


Standard:

**DPR8EA 9 (NGK) or
X24EPR U9 (DENSO)**

1. Remove the screws (1) and right front side cover (2).

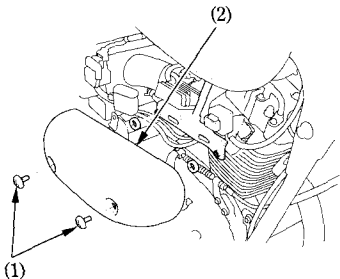

2. Disconnect the spark plug cap (3) from the spark plug.
3. Clean any dirt from around the spark plug bases. Remove the spark plug using the plug wrench (4) furnished in the tool kit.
4. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling. If the erosion or deposit is heavy, replace the plug. Clean a carbon or wetfouled plug with a plug cleaner, otherwise use a wire brush.

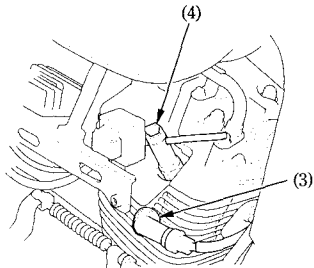

(1) Screws

(2) Right front side cover

(3) Spark plug cap

(4) Plug wrench