


## License Light Bulb

1. Remove the license light cover (1) and license light lens (2) by removing the two screws (3).
2. Pull out the bulb (4).
3. Install a new bulb in the reverse order of removal.

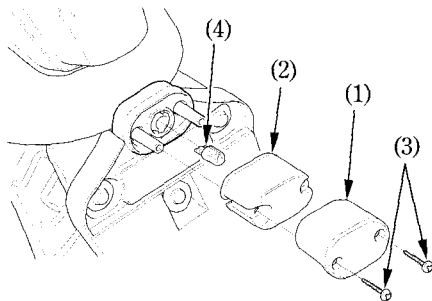

- |                         |            |
|-------------------------|------------|
| (1) License light cover | (3) Screws |
| (2) License light lens  | (4) Bulb   |