


//////////////////////OPERATING INSTRUCTIONS////////////////////////////////////

Ignition Switch

The three position ignition switch ① is located on center of the handlebar. In the "RUN" position (center) the ignition circuit is complete and the engine operates. In the "OFF" position (either side of center) the ignition circuit is open and the engine will not operate.

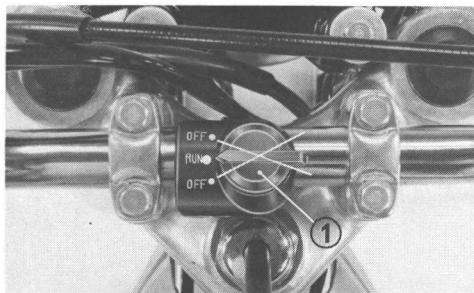


① Ignition switch

Headlight Switch

The headlight switch ① and the headlight dimmer switch ② are located at the left handlebar grip.

Move the headlight switch ① up to turn the headlight and taillight on, and down to turn off.

Move the headlight dimmer switch ② to the "Hi" position to select high beam and to the "Lo" position to select low beam. The lights will only operate when engine is running.

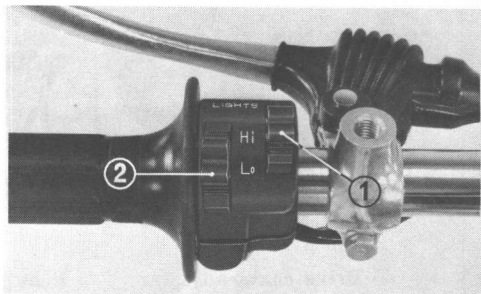

① Headlight switch
② Headlight dimmer switch