


## Front Suspension Inspection

Check front fork action by locking the front brake and pumping the forks up and down several times. The suspension should function smoothly, with no oil leakage from the fork legs. Damaged, binding, or leaking front forks should be repaired before the motorcycle is operated. Check security of all front fork and handlebar mounting bolts illustrated below.

**WARNING:** Contact your Honda dealer for repair of any steering or front suspension wear or damage.

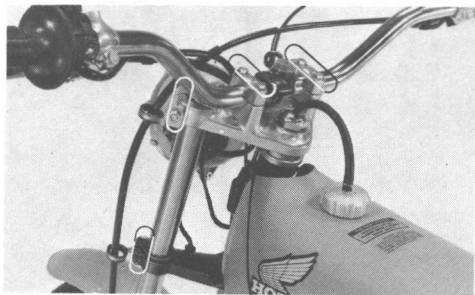


**Do not operate the motorcycle with loose, worn, or damaged steering or front suspension, as handling will be adversely affected.**

## Front Fork Oil Change

To maintain good riding characteristics and increase fork service life, the oil in the front fork should be changed periodically.

1. Remove drain plugs ① from each fork leg and pump the forks several times to ensure complete draining.
2. Reinstall drain plugs and block up the front of the motorcycle.

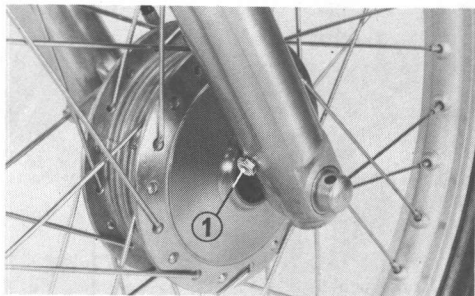

① Front fork drain plug